



U60

Commercial Fitness Bike

Congratulations on choosing a VISION FITNESS Bike. You've taken an important step in developing and sustaining an exercise program! Your Bike is a tremendously effective tool for achieving your facility's fitness goals. Regular use of your Bike can improve the quality of your members' lives in so many ways.

Here are just a few of the health benefits of aerobic exercise:

- Weight Loss
- A Healthier Heart
- Improved Muscle Tone
- Increased Daily Energy Levels
- Reduced Stress
- Help in Countering Anxiety and Depression
- An Improved Self Image

The key to reaping these benefits is to develop the exercise habit. Your new Bike will be an important tool in helping your members achieve this exercise habit. This Owner's Guide provides you with basic information on using this VISION FITNESS Bike. A more complete knowledge of your new Bike will assist you in helping your members achieve their goals.

Some kinds of service to your Bike should only be performed by your VISION FITNESS retailer. Please contact your authorized VISION FITNESS retailer should service be required. If a question or problem arises which cannot be handled by your VISION FITNESS retailer, please contact us:

VISION FITNESS
1600 Landmark Drive
Cottage Grove, WI 53527
Ph: 1.800.335.4348
Fax: 1.608.839.8731
www.visionfitness.com

Table of Contents.....

INTRO


SAFETY INSTRUCTIONS.....	4
ASSEMBLY & MOVING THE BIKE	6
STABILIZING THE BIKE, PEDAL STRAP ADJUSTMENT.....	7
SEAT ADJUSTMENT.....	8
SELF-POWERED FEATURE & CONTACT HEART RATE.....	9

CONSOLE

DISPLAY CONSOLE	10
DISPLAY CONSOLE DESCRIPTIONS....	11
BATTERY	13
PROGRAM OVERVIEWS	14
USING THE PROGRAMS.....	16
USING HEART RATE TRAINING.....	18
TELEMETRIC HEART RATE CHEST STRAP, PLACEMENT.....	19

GENERAL

PREVENTATIVE MAINTENANCE.....	20
TROUBLESHOOTING.....	21
TROUBLESHOOTING HEART RATE MONITOR CHEST STRAP.....	23
DEVELOPING A FITNESS PROGRAM...	24
EXERCISE GUIDELINES	25
BALANCED FITNESS	26

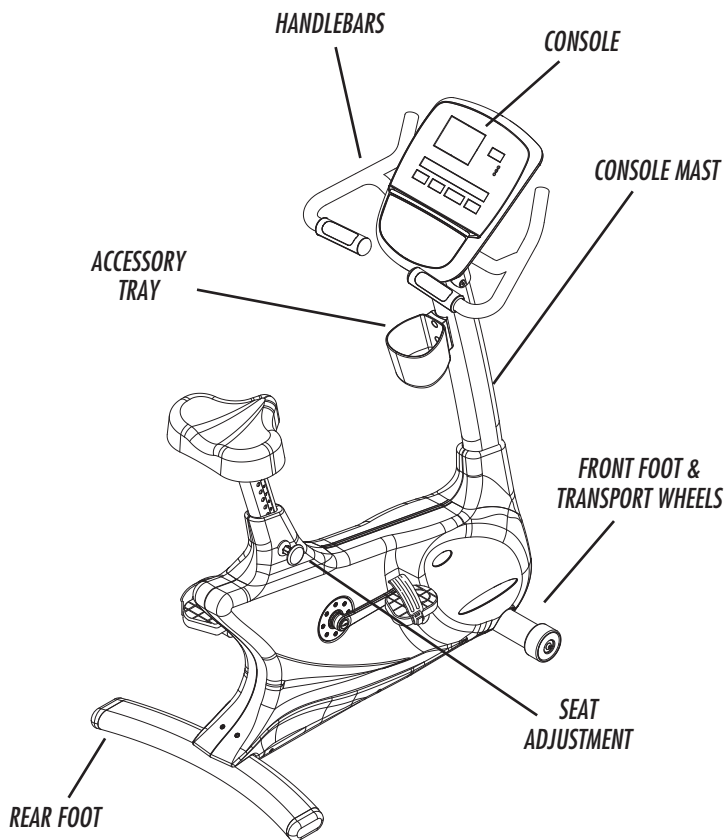

IMPORTANT SAFETY INSTRUCTIONS

SAVE THESE INSTRUCTIONS

When using an electrical product, basic precautions should always be followed, including the following: Read all instructions before using this exercise product.

Your VISION FITNESS Bike is self-generating (requiring no external power source) and must be pedaled to power-up the console.

WARNING! To reduce the risk of burns, fire, electrical shock or injury to persons:

- Use this exercise product for its intended use as described in this Owner's Guide. Only use attachments recommended by the manufacturer.
- Never drop or insert any object into any opening.
- Do not remove the Bike sidecovers. Service should be performed only by an authorized VISION FITNESS retailer.
- Never operate this Bike if it is not working properly or if it has been damaged or immersed in water. Return the Bike to a retailer for examination and repair.
- Do not use outdoors.
- The maximum user weight capacity is up to 400 lbs. (182 kg.)

CHILDREN

- Keep children off of your Bike at all times.
- When the Bike is in use, young children and pets should be kept at least 10 feet away.

OTHER SAFETY TIPS FOR YOUR VISION FITNESS BIKE

CAUTION! If you experience chest pains, nausea, dizziness or shortness of breath, stop exercising immediately and consult your physician before continuing.

- Do not wear loose clothing that might catch on any part of the Bike.
- Read this Owner's Guide before operating this Bike.
- Drink plenty of fluids during your workout.

WARNING!

- Heart rate monitoring system may be inaccurate. Over exercise may result in serious injury or death. If you feel faint stop exercising immediately.

CLEANING


- Clean only with soap and a slightly damp cloth; never use solvents.

ASSEMBLY

It is recommended, when possible, that an authorized VISION FITNESS retailer assemble your Bike. If you have elected to assemble this product yourself, for your safety please read and follow each of the steps in the enclosed assembly instructions. If you have any questions regarding any part or function of your Bike, contact your retailer.

MOVING


Your VISION FITNESS Bike has transport wheels included for ease of mobility. To move your UPRIGHT Bike, firmly grasp the rear of the frame assembly, or the rear of the seat rail. Carefully lift and roll on the transport wheels. To move your Upright Bike, firmly grasp the handlebars, carefully tip toward you, and roll on the transport wheels.

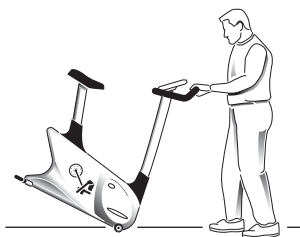

CAUTION: Our Bikes are well-built and heavy, weighing up to 160 pounds! Use care and additional help if necessary.

STABILIZING THE BIKE

After positioning the Bike in its intended location, check its stability by attempting to rock it side to side. Rocking or wobbling indicates that your Bike needs to be leveled. Determine which leveler is not resting completely on the floor. Loosen the wing nut at the base of the leveler to allow the leveler to rotate. Now rotate the leveler to the left or right until the Bike is stable. Lock the adjustment by tightening the wing nut against the rear foot support.

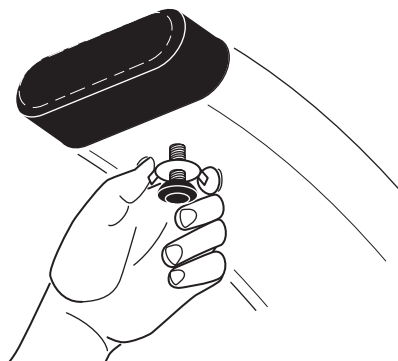


PEDAL STRAP ADJUSTMENT

The straps are designed to fit your individual foot size and should be adjusted tight enough to keep your feet from slipping.

SEAT POST ADJUSTMENT

The *U60* uses a simple pull-pin adjustment knob to adjust seat height. To adjust, grab hold of the seat and pull the seat post knob out. Raise or lower the seat to its desired position and release the seat post knob. Push down on the seat to make sure the pin is secure in the rail. Seat height adjust level from 1 to 15, if you see the mark on 15, please **DO NOT** pull out the seat post anymore.

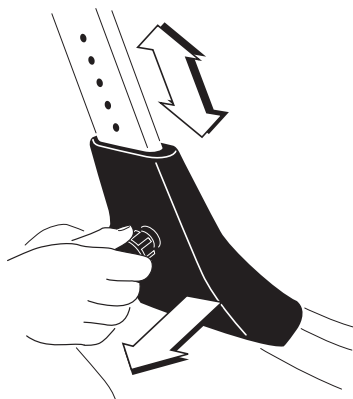

SEAT POSITIONING

To determine proper seat position, sit on the seat and position the ball of your foot on the center of the pedal. Your knee should bend slightly at the furthest pedal position. You should be able to pedal without locking your knees or shifting your weight from side to side.




SELF-POWERED FEATURE

The *U60* is a self-powered unit, requiring no external power source. When a user pedals at a speed above 25 revolutions per minute (RPM), the power is generated to allow the Bike to function properly. Because of this self-generating feature, the console feedback will fade away when you cease pedaling. The console does, however, use a 9-volt battery as backup to save your feedback information for 30 seconds from the time you stopped pedaling. If you resume pedaling within the 30 seconds, the information will reappear. If the information does not appear within the 30 seconds, your battery may need to be plugged in or replaced.

CONTACT HEART RATE

HAND PULSE HEART RATE SENSORS

The Contact Hand Pulse Sensors are included on each product to monitor your heart rate. To use, grasp both of the sensors with a comfortable grip during your workout. The console will display your heart rate. Although your signal will be displayed immediately, it may take the system a few seconds to zero in on your actual heart rate.

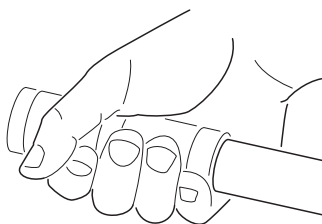


DISPLAY CONSOLE

DISPLAY CONSOLE OVERVIEW

The computerized display allows the user to select a workout that meets their desired fitness goals. It also allows the user to monitor the progress and feedback of each workout so they can track improvements in overall fitness over time.

CONSOLE

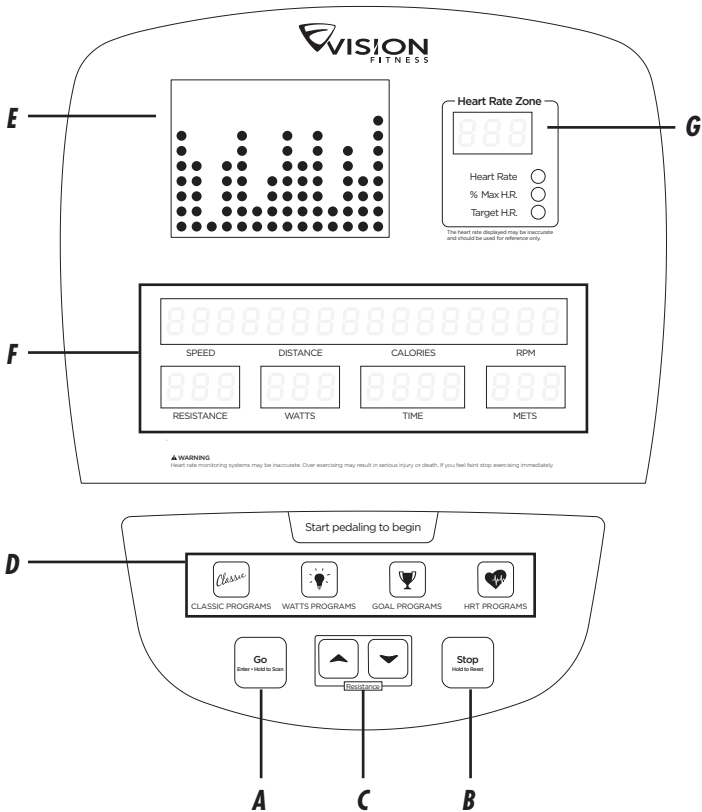

DISPLAY CONSOLE DESCRIPTIONS

A. GO/ENTER/HOLD TO SCAN

Press the GO key to begin a MANUAL workout immediately without having to set individual information. When the program begins, you have the ability to adjust resistance levels with the ARROW keys. Feedback information will be calculated using default settings.

ENTER: This key is used after entering each piece of information in setup such as age, weight, or level.

HOLD TO SCAN: If you need to change the display of heart rate, you can do so by holding down the GO button for three seconds, the HEART RATE ZONE window will display HEART RATE, % MAX. HEART H.R., TARGET H.R. in sequence in HRT PROGRAMS.

B. STOP/HOLD TO RESET

STOP: If you need to STOP your program during the workout, press the STOP key will STOP the program.

RESET: If you need to RESET the console during your workout, you can do so by holding down the GO button for three seconds or until the display resets.

C. ARROW BUTTONS

These keys are used to change values in setup mode prior to your workout. During your workout, they are used to change workout levels. In HRT® programs, they are used to change your target heart rate.

D. PROGRAM BUTTONS

These keys provide quick access to your favorite workouts. Press the arrow keys to select one of multiple workouts.

DISPLAY CONSOLE DESCRIPTIONS (continued)

E. PROFILE DISPLAY

This window provides a dot matrix profile of the workout segments you are about to complete, as well as those you have already completed, and the level of resistance for each segment.

F. MESSAGE/FEEDBACK WINDOWS

These windows provide step-by-step instructions in the setup mode, instructions, feedback and motivational messages during your workout.

FEEDBACK:

During your workout, these windows display exercise feedback about your workout, including:

SPEED: the pedaling speed in miles or kilometers per hour.

DISTANCE: the total distance traveled in miles or kilometers since the start of your workout.

CALORIES: an estimate of calories burned since the beginning of the workout.

RPM: the pedal rate or Revolutions Per Minute (RPM).

RESISTANCE: the current resistance level of your workout.

WATTS: a measurement of workload; one watt is equal to six kilogram-meters per minute.


TIME: the time elapsed or the time remaining in your workout.

METS: a measurement of oxygen consumption; one MET equals the approximate amount of oxygen consumed per minute by a person at rest.

NOTE: At the end of your workout, the totals will be displayed as averages of your total workout time. The only exceptions are distance and calories, which are program totals.

G. HEART RATE/HRT FEEDBACK WINDOW

This window provides feedback on your current heart rate and the percent of your predicted maximum heart rate (% Heart Rate). It also includes your target heart rate when using one of the HRT® programs.

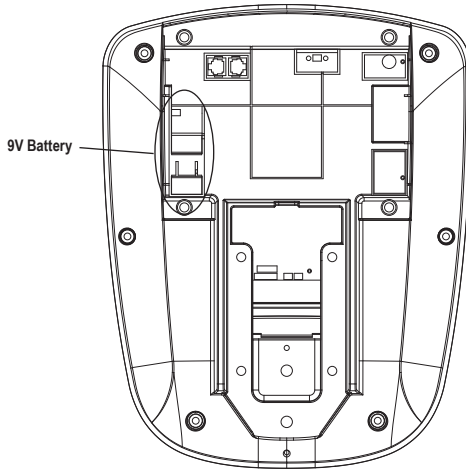

BATTERY: Your console is equipped with a 9V battery to maintain workout information.

PROGRAM OVERVIEWS



CLASSICS

MANUAL is a user-controlled program in which the resistance remains at a set level unless you decide to change it.

INTERVAL is an efficient workout that strengthens your cardiovascular system by alternating work intervals and recovery intervals. Be sure to challenge yourself with intense work intervals.

FAT BURN is a program designed to target your stored body fat. This program is generally used at a slightly lower resistance level but runs for longer durations than other programs.

RANDOM is a program that will give you a different workout every time you workout. The resistance levels will change randomly, providing a challenging workout.



WATTS PROGRAMS

CONSTANT WATTS allows you to set your target WATT output (energy output). The resistance will change automatically to keep you at your target WATTS.

INTERVAL WATTS allows you to choose a high WATTS value and a low WATTS value. The interval program will switch between High and Low WATTS values, making for a very intense and effective workout.

HILL WATTS lets you choose four WATTS levels. Each WATTS level will change at 1 minute intervals and repeat until your preset workout time is over. Perfect for a challenging workout.



GOAL PROGRAMS

TIME GOAL allows you to set your target workout time. This program can help users to manage the time when they workout.

DISTANCE GOAL allows you to choose the workout distance. This program can help users to do self-challenge.

CALORIES GOAL allows you to set the calories you want to consume during workout. This program can help the users to control the calories.



HRT® PROGRAMS


HRT INTERVAL this program is designed to increase your cardiovascular fitness capacity. The user must grasp the hand pulse sensors or wear a telemetric heart rate chest strap during use.

HRT WEIGHT LOSS is a lower intensity workout that will help your body burn a higher percentage of calories from your body's fat reserves. The user must grasp the hand pulse sensors or wear a telemetric heart rate chest strap during use.

USING THE PROGRAMS


SELECTING EASY START

The easiest way to begin exercising is to simply press the GO key. You will begin exercising in a MANUAL resistance program in which you can change the resistance levels to meet your goals. Current default settings will be used to determine exercise feedback.

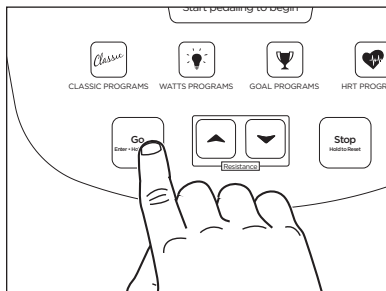


SELECTING A PROGRAM

Each program has its own program button. Some program buttons have multiple programs. Press the key of the program you would like to use.

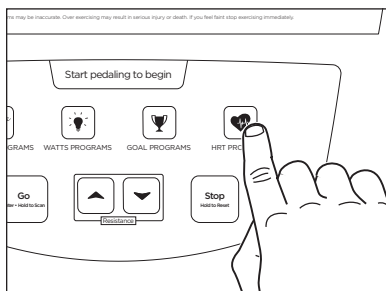


ENTERING AGE

When prompted by the message center to enter your age, use the UP ▲ arrow or DOWN ▼ arrow to adjust displayed age to the correct value. This information is necessary for the HRT® programs and will affect your "% Heart Rate" feedback.

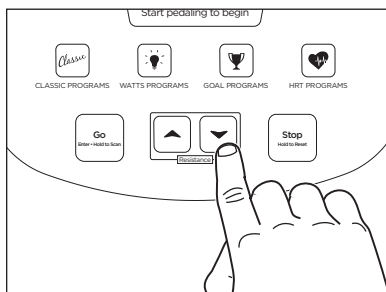


ENTERING TIME

When prompted by the message center to enter a time, use the UP ▲ arrow and DOWN ▼ arrow to adjust the displayed exercise time to a desired value.

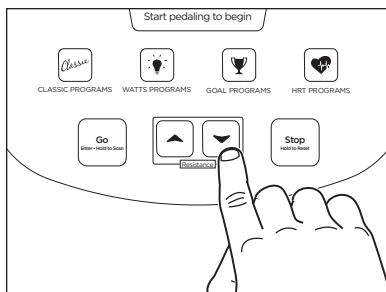


ENTERING RESISTANCE

When prompted by the message center to enter level, use the UP ▲ arrow and DOWN ▼ arrow to adjust the displayed resistance level. There are 25 levels of resistance to choose from in each program. The maximum resistance level varies by program.

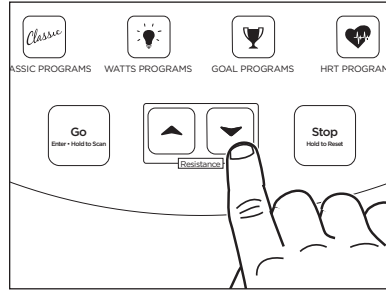

ENTERING WEIGHT

When prompted by the message center to enter weight, use the UP ▲ arrow and DOWN ▼ arrow to adjust the displayed weight to equal your current body weight. This information is necessary to give accurate exercise feedback for calorie and MET calculations.

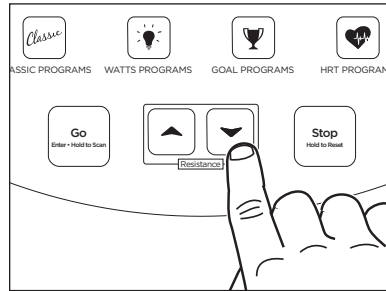

This is a bike that the braking system is adjustable. The training speed and resistance setting below that are used in the test for reference.

RPM	LEVEL	DISPLAY (WATT)
50	4	46
	5	53
	9	88
60	12	136
	16	176
70	17	211
	20	240

The WATTS programs will ask you to set the desired WATT level instead of resistance levels. The WATT level will range from 40 to 250 in increments of five.

The HRT programs will set your target heart rate in the place of resistance level. The console will display your target heart rate and give you the opportunity to adjust this value if you wish.

USING HEART RATE TRAINING


WHAT IS HEART RATE TRAINING?

Heart Rate Training means exercising at an intensity that keeps you in your ideal heart rate zone. Your personal heart rate training zone depends on your fitness goal, such as weight loss, cardiovascular endurance, or strength building. VISION FITNESS HRT® programs are set up to keep you at an ideal heart rate based on your fitness goal. These programs automatically adjust resistance based on your heart rate readings.

The console features two programs (HRT Weight Loss, HRT Interval) that offer the benefits of Heart Rate Training. Refer to Page 19 for more details on these programs.

HAND PULSE HEART RATE SENSORS

The Contact Hand Pulse Sensors are included on each product to monitor your heart rate. To use, grasp both of the sensors with a comfortable grip during your workout. The console will display your heart rate. Although your signal will be displayed immediately, it may take the system a few seconds to zero in on your actual heart rate.

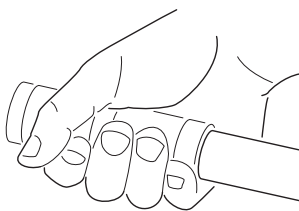


NOTE: The Contact Hand Pulse Sensors will work for the HRT® programs, but it is recommended to use the telemetric chest strap for an uninterrupted signal and ease of use.

WARNING: Heart rate monitoring systems may be inaccurate. Over exercising may result in serious injury or death. If you feel faint stop exercising immediately

TELEMETRIC HEART RATE CHEST STRAP


The wireless Telemetric Chest Strap uses a pair of electrodes on the underside of the strap to send your heart rate signal to the console. Prior to wearing the chest strap, moisten the two rubber electrode pads with several drops of water. These electrodes must remain wet to provide an accurate signal. We advise using the chest strap against your skin, but it also functions through a thin layer of wet clothing.

NOTE: Heart Rate Chest Strap is optional, not include in the box

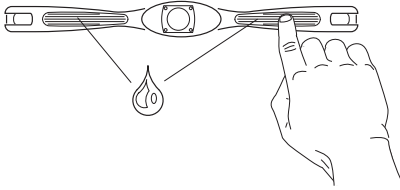

STRAP PLACEMENT

Center the transmitter strap just below the breast or pectoral muscles, directly over your sternum with the logo facing out. Adjust the elastic strap so it is snug but comfortable enough for proper breathing.

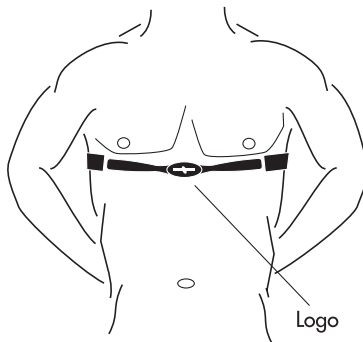

SERVICE AND TROUBLESHOOTING

PREVENTATIVE MAINTENANCE TIPS

- Locate Bike in a cool, dry place.
- Clean the top surface of the pedals regularly.
- Make sure pedals are kept tight to crank arms.
- Keep the display console free from fingerprints and salt buildup caused by sweat.
- Use a cotton cloth with water and a mild cleaning product to clean the Bike. Other fabrics, including paper towels, may scratch the surface. Do not use ammonia or acid-based cleaners.
- Clean the housing thoroughly on a regular basis.

PREVENTATIVE MAINTENANCE SCHEDULE

Follow the schedule below to ensure proper operation of the product.

ITEM	WEEKLY	MONTHLY	BI-ANNUALLY	ANNUALLY
DISPLAY CONSOLE	CLEAN	INSPECT		
CONSOLE MOUNTING BOLTS			INSPECT	
FRAME	CLEAN			INSPECT
SEAT FRAME	CLEAN	INSPECT		
HANDLEBARS	CLEAN	INSPECT		
PLASTIC COVERS	CLEAN	INSPECT		
PEDALS AND STRAPS	CLEAN	INSPECT		
SEAT	CLEAN		INSPECT	

TROUBLESHOOTING

Our Bikes are designed to be reliable and easy to use. If, however, you have a problem, these troubleshooting steps may reveal the cause.


PROBLEM: The console does not light up.

SOLUTION: Make sure you are pedaling the Bike.

SOLUTION: Make sure the wire harness is plugged into the back of the console.

PROBLEM: The Bike is making a clicking noise.

SOLUTION: Using the pedal wrench supplied with your Bike, remove both the left and right pedals, apply grease to the threaded portion and reassemble the pedals onto the Bike. Make sure the pedals are tight.

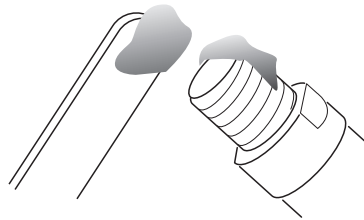

SOLUTION: Make sure the pedal straps or your shoe laces are not hitting the side cover.

SOLUTION: Assure seat adjustment is tight.

PROBLEM: The Bike makes a squeaking or creaking noise.

SOLUTION: Check and tighten all hardware.

NOTE: If the above steps fail to remedy the problem, discontinue use, turn the power off and contact your retailer.

OBTAINING SERVICE

Do not attempt to service this Bike yourself except for the maintenance tasks described in this manual. For information on service to your VISION FITNESS Bike, contact the local retailer from whom you purchased the Bike. To expedite service, please make sure to have your serial number available. The serial number is found on a label located on the front support tube of your Bike.

SERIAL NUMBER: _____

TROUBLESHOOTING YOUR HEART RATE MONITOR CHEST STRAP

PROBLEM: No pulse reading appears.

SOLUTION: There may be a poor connection between the contact pads and skin; remoisten the electrode pads.

SOLUTION: Transmitter is not properly positioned; reposition the chest strap.

SOLUTION: Verify that the distance between the transmitter and receiver is not beyond the recommended range of 36 inches.

PROBLEM: There is an erratic pulse rate.

SOLUTION: Chest strap is too loose; readjust according to directions.

NOTE: It is possible that heart rate monitors will not function properly on some people for a variety of reasons. It may be necessary to experiment with the fit and position of the chest strap. Outside interference sources such as computers, motors, electric dog fences, home security systems, remote controls, CD players, fluorescent lights, etc., may cause problems for heart rate monitors.

DEVELOPING A FITNESS PROGRAM

By purchasing this piece of VISION FITNESS exercise equipment, you have made a commitment to exercise and now have the convenience of exercising in your own home. Your new equipment offers the flexibility to exercise at whatever time suits you best. It will be easier to maintain a consistent exercise program that will help you achieve your fitness goals.

ACHIEVING YOUR FITNESS GOALS

An important step in developing a long-term fitness program is to determine your goals. Is your primary goal to lose weight? Improve muscle tone? Relieve stress? Prepare for the spring racing schedule? Knowing what your goals are will help you develop a more successful exercise program. If possible, try to define your personal goals in precise, measurable terms over specific periods of time. Examples of these goals might include:

- Decrease your waistline by two inches over the next two months.
- Run the local 5K race this summer.
- Get 30 minutes of cardiovascular exercise at least five days per week.
- Improve your race time by two minutes over the next year.
- Move from walking a mile to jogging a mile within the next three months.

The more specific the goal, the easier it will be to track your progress. If your goals are long-term, divide them into monthly and weekly segments. Long-term goals can lose some of the motivational benefits. Short-term goals are easier to achieve and will allow you to see the progress you are making. Every time you reach a goal, it is important to set a new goal. This will lead to a healthier lifestyle and will provide the motivation that you will need to move forward.

TRACK YOUR PROGRESS

Now that you have set your exercise goals, it is time to write them down and make an exercise schedule that will help you achieve them. By keeping a fitness diary, you will stay motivated and know where you are in terms of reaching your goals. As time goes on, you will be able to look back with pride to see how far you've come. For your convenience, we have included exercise log sheets in the wellness tools section of our website at www.visionfitness.com.

EXERCISE GUIDELINES

EXERCISE DURATION

A common question asked is, “how much exercise do I need?” We recommend following the guidelines set up by the American College of Sports Medicine (ACSM) for healthy aerobic activity.

- Exercise three to five days per week.
- Warm up for five to 10 minutes before aerobic activity.
- Maintain your exercise activity for 30 to 45 minutes.
- Gradually decrease the intensity of your workout, then stretch to cool down during the last five to 10 minutes.

If weight loss is a major goal, participate in your aerobic activity at least 30 minutes for five days each week.

EXERCISE INTENSITY

The next question asked is, “how hard do I need to work out?” To reap the most cardiovascular benefits from your workout, it is necessary to exercise within a recommended intensity range. We recommend monitoring your exercise heart rate to measure exercise intensity.

BALANCED FITNESS

While cardiovascular exercise has been the primary method of fitness for many programs over the years, it should not be the only method. Strength Training and Flexibility Training have become more popular as exercise has developed. Incorporating Strength and Flexibility Training into your current exercise program will give you the balance you need to improve your athletic performance, reduce susceptibility to injury, increase metabolic rate, increase bone density, and reach your goals faster.

STRENGTH TRAINING

Strength Training was once known as an activity performed by young males only. That has changed with the advances in scientific research on Strength Training over the last 20 years or so. Research has proven that, after age 30, we begin to lose muscle mass if we do not incorporate Strength Training into our exercise program. With this decrease in muscle mass, our ability to burn calories decreases, our physical ability to do work decreases and our susceptibility to injuries increases. The good news is that, with a proper Strength Training program, we can maintain or even build muscle as we age. A proper Strength Training program will work the muscle groups of the upper and lower body. There are now many options available for Strength Training including: yoga, Pilates, selectorized machines, free weights, stability balls or medicine balls, exercise tubing and body weight exercises, just to name a few.

Recommendations for a minimum Strength Training program include:

FREQUENCY: Two to three days per week

VOLUME: One to three sets consisting of eight to 12 repetitions.

MOVE WITH CONFIDENCE

1600 Landmark Drive • Cottage Grove, WI 53527

toll free 800.335.4348 • fax 608.839.8731

www.visionfitness.com

©2019 Vision Fitness. All Rights Reserved. ECB-Plus, HRT, PerfectStride, Quick-Set, Quiet-Glide, SPRINT 8, and Suspension Elliptical are Trademarks of Vision Fitness.